



Milk Frother / Milchschäumer Hot & Cold (EA)

Bedienungsanleitung

Instructions for use

Mode d'emploi

Istruzioni per l'uso

Gebruiks aan wijzing

Modo de empleo

Manual de instruções

Bruksanvisning

Instruksjonsbok

Instrukcja obsługi

Руководство по эксплуатации

Návod k obsluze

de

en

t

es

SV.

no

ru

cs

Control elements



- Cover
- Milk container
- 3 Attachment for milk/milk foam*
- 4 Heating plate
- Machine base
- 6 Operating symbols
 - © Cold milk foam
 - Hot milk foam
 - Hot milk
 - Hot chocolate
- Mains cable (back of the machine)

*2 × supplied as standard

Contents

Co	ntrol elements	. 10
Co	ntents	11
1	Important safety information	. 12
2	Setting up and connecting	14
3	Operation Milk foam / hot milk Hot chocolate	14
4	Cleaning	15
5	Transport and environmentally friendly disposal Transport Disposal	16 16 16
6	Technical data	16
7	JURA contact details / Legal information	. 16

Scan and enjoy



jura.com/recipes

de

en

it

nı

pt

GV/

no

рI

cs

1 Important safety information

Before using the machine, read these instructions for use thoroughly and completely and comply with the instructions they contain. Keep these instructions for use close to the machine and pass them on to the next user.

Failure to observe the instructions for use may result in serious injuries or damage to property. Safety information is therefore indicated as follows:

⚠ DANGER

Indicates circumstances that may result in very serious injuries or death.

⚠ WARNING

Indicates circumstances that may result in serious injuries or death.

↑ CAUTION

Indicates circumstances that may result in minor injuries.

CAUTION

Indicates circumstances that may result in damage to property.

To avoid damage and any associated risk of injury or fire, please carefully read and observe the important safety information set out below when using an electrical appliance:

- After unpacking, check the machine for damage. If you are in any doubt, do not use the machine and contact customer support in your country.
- Dispose of packaging material (e.g. plastic bags) out of the reach of children, as it poses a risk of suffocation.
- If the mains cable of this machine is damaged, it must be repaired either directly by JURA or by an authorised JURA service centre.
- Be careful to ensure that the mains cable is not trapped and does not rub against sharp edges.
 Never allow the mains cable to hang down loosely. The mains cable could pose a tripping hazard or become damaged.
- Make sure that the milk frother and the mains cable are not located close to hot surfaces.
- Never open and repair the machine yourself. Do not modify the machine in any way that is not described in the instructions for use. The machine contains live parts. Repairs may only be carried out by authorised JURA service centres, using original spare parts and accessories.

- Only connect the machine to the mains voltage in accordance with the information on the rating plate. The rating plate is located on the underside of your milk frother. Further technical data is given in these instructions for use (see Chapter 6 'Technical Data').
- Only use the milk frother out of the reach of children because the milk may get very hot.
- Do not use damaged milk containers.
- Only hold the milk container by the heat-resistant upper part.
- Do not touch the hot surface of the heating plate.
- Do not place the milk container in a microwave.
- Only place the milk container supplied on the heating plate.
- The surface of the heating element and outer enclosure remains hot after use and the outside of the appliance may retain heat.
- Allow the machine to cool down before cleaning.
- Do not put the machine base in the dishwasher.
- The milk container, the cover and the attachment for milk/milk foam are dishwasher-safe.
- Ensure that the heating plate and base of the milk container are clean at all times during use.

- Disconnect the mains plug from the power socket if you are going to be absent for long periods and before assembling, disassembling or cleaning.
- Only operate the machine when supervised.
- Keep the milk frother and its cord out of reach of children aged less than 8 years.
- Children shall not play with the milk frother.

Proper use

The machine is designed and intended for private domestic use. It is used to froth and/or heat milk in the supplied milk container. Use for any other purpose will be deemed improper. JURA cannot accept any responsibility for the consequences of improper use.

People, including children, who do not have the

- physical, sensory or mental capabilities to use the machine safely,
- or lack the necessary experience or knowledge to use the machine safely,

must be supervised by a responsible person when using it, or must be instructed in how to use it correctly. de

en

it

es

ςν

no

ru

2 Setting up and connecting

- Place the milk frother on a horizontal, stable surface that is not sensitive to water.
- Choose a spot for your milk frother which is protected against overheating.
- i In the interests of hygiene, you should clean the machine base with a damp cloth and thoroughly rinse the milk container before starting the milk frother for the first time. Dry everything thoroughly.

⚠ WARNING

If the machine is operated with a defective mains cable, there is a danger of potentially fatal electric shock.

- Never use a machine which is damaged or has a defective mains cable.
- Insert the mains plug into a power socket. The machine beeps once.

3 Operation

Basic information on operation:

- With your milk frother, you can prepare
 - cold milk foam 🗑
 - hot milk foam 🗑
 - hot milk 🖾 or
 - hot chocolate 🕙
- Always add sufficient milk to the milk container – at least up to the MIN mark.
- Do not add too much milk to the milk container **don't fill beyond** the MAX mark ① for milk foam or the MAX mark ♡ for hot milk
- You can interrupt preparation at any time. To do this, touch the operating symbol of the product you are currently preparing or lift the milk container off the machine base.

Milk foam / hot milk

Example: Proceed as follows to prepare **hot** milk foam.

- Insert the attachment for milk/milk foam into the milk container. It will click into place audibly.
- ► Add cold milk up to at least the MIN mark but not beyond the MAX mark ① .
- ▶ Place the cover on the milk container.
- Place the milk container on the machine base.
- Touch any operating symbol.
 The milk frother is now ready for use.
- ► Touch the operating symbol (a).

 The symbol selected flashes twice by way of confirmation. The machine then starts automatically. When preparation is complete, the machine beeps twice.
- Lift the milk container off and pour out the milk foam. CAUTION! Danger of scalding! Do not touch the heating plate or the lower part of the milk container.
- Place the milk container on a heat-resistant surface or back on the machine base.
- Remove the mains plug and leave the machine to cool down.
- ► Always rinse and clean the machine after use.

Hot chocolate

When preparing hot chocolate, the milk is heated first. Then small pieces of chocolate or chocolate powder are added as desired.

- Prepare the small pieces of chocolate that you want to use
- Insert the attachment for milk/milk foam into the milk container. It will click into place audibly.
- ► Add cold milk up to at least the MIN mark but not beyond the MAX mark □.
- Place the cover on the milk container

- Place the milk container on the machine base.
- Touch any operating symbol.
 The milk frother is now ready for use.
- ► Touch the operating symbol ②.

 The symbol selected flashes twice by way of confirmation. The machine then starts automatically. The milk is heated.

 The machine beeps once.
- Add small pieces of chocolate to the milk as desired and put the cover back on the milk container.
- ► Touch the operating symbol .

 Preparation continues. When preparation is complete, the machine beeps twice.
- Lift the milk container off and pour out the hot chocolate. CAUTION! Danger of scalding!
 Do not touch the heating plate or the lower part of the milk container.
- Place the milk container on a heat-resistant surface or back on the machine base.
- Remove the mains plug and leave the machine to cool down.
- ► Always rinse and clean the machine after use.

4 Cleaning

We recommend that you clean the milk container every day with the JURA milk system cleaner. The milk system cleaner makes light work of removing milk fats, proteins and even dried-on milk residues.

⚠ WARNING

Cleaning product is harmful to health and an irritant. Harmful to health if swallowed. Irritating to eyes and skin.

- ► Keep AWAY from children.
- Avoid contact with the eyes and skin.
- If product comes into contact with the skin: Immediately wash off with plenty of water.
 Seek medical advice if the skin is irritated.

- If product comes into contact with the eyes:
 With the eyelid open, gently rinse out the eyes for 10-15 minutes with running water and consult a doctor.
- If product is swallowed: Immediately rinse out the mouth and drink a large amount of water in sips. Try not to vomit. If you experience lasting problems, consult a doctor and show them the milk system cleaner packaging.

▲ CAUTION

Danger of scalding from hot machine parts.

- Allow the machine to cool down before cleaning.
- i Do not use harsh or abrasive cleaning agents or hard objects to clean the machine. These could damage the machine and milk container.
- i Do not immerse the milk frother in water.
- i JURA milk system cleaner is available from specialised dealers.

Prerequisite: The attachment for milk/milk foam has been inserted into the milk container. The machine has cooled down.

- Pour a capful of milk system cleaner into the milk container.
- ► Add fresh water up to the MAX 🗍 mark.
- ► Place the cover on the milk container.
- Place the milk container on the machine base.
- Touch any operating symbol.
 The milk frother is now ready for use.
- ► Touch the operating symbol ②.

 The symbol selected flashes twice by way of confirmation. The machine then starts cleaning automatically.
- Wait for the machine to stop.
- Lift the milk container off and empty it.

de

en

it

es

sv

pl

CS

Milk frother

 Rinse the milk container, cover and attachment thoroughly under running water and dry off all parts.

5 Transport and environmentally friendly disposal

Transport

Keep the packaging for your milk frother. It should be used to protect the machine during transport. Clean the milk container before transporting it.

Disposal

Please dispose of old machines in an environmentally friendly way.

亙

Old machines contain valuable, recyclable materials which should be taken to an appropriate disposal centre. Please therefore dispose of old machines via suitable collection systems.

6 Technical data

Voltage	220–240 V ~, 50/60 Hz
Conformity marking	C€ E¤
marking	
Power	500-600 W
Holding capacity of milk container	0.1–0.36
Cable length	approx. 0.7 m
Dimensions (W × H × D)	11.5 × 22.5 × 11.5 cm

7 JURA contact details / Legal information

JURA Elektroapparate AG Kaffeeweltstrasse 10 CH-4626 Niederbuchsiten, Switzerland Tel. +41 (0)62 38 98 233

1 You can find additional contact details for your country at **jura.com**.

Directives

The machine complies with the following directives:

- 2014/35/EU Low Voltage Directive
- 2014/30/EU Electromagnetic Compatibility
- 2009/125/EC Ecodesign Directive

Technical changes

We reserve the right to make technical changes. The diagrams used in these instructions for use are for illustration purposes only and do not represent the original colours of the machine. Some details of your machine may vary.

Feedback

Your opinion is important to us! Use the contact link at **jura.com**.

Milk Frother(EA)/de-cs/202509